

## ATV Tire Size

Wheel Width	Ounces Required
Less than 10" width	2oz
10" – 12" width	3oz
Larger than 12" width	4oz

## ATV/UTV Tire Sizes

Tire Height	Ounces Required
23" – 29"	4oz
30" – 33"	6oz
33" – 37"	8oz
37" – Up	10oz


### Kits Available:

All kits include Counteract Balancing Beads, Valve Cores, Valve Caps, Valve Core Remover, Injection Bottle and Tube;

- Kit H = 4 x 2oz
- Kit I = 2 x 2oz + 2 x 3oz
- Kit J = 4 x 3oz
- Kit K = 4 x 4oz
- Kit L = 4 x 6oz
- Kit M = 4 x 8oz
- Kit N = 4 x 10oz

Counteract does not accept any responsibility for use in Sand Paddle tires. These tires are not designed to be driven on road, and therefore cannot be balanced.

Note: Due to the nature and uses of ATV/UTV tires, Counteract cannot guarantee a 100% balance. The use of this product in ATV/UTV applications is intended for a smoother, less fatiguing drive with an 80% decrease in vibration. Counteract is however the best means of providing balance to these applications.

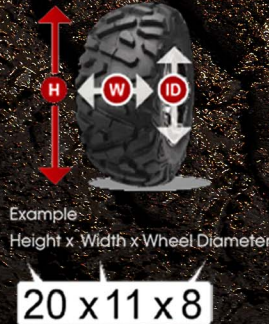

**Counteract**  
**OFF ROAD**  
 ATV & UTV Tire Balancing



**Counteract**  
**OFF ROAD**  
 ATV & UTV Tire Balancing

Counteract Balancing Beads Inc.

555 Southgate Drive

Guelph ON N1G3W6

Tel: 519-837-3331

Toll Free: 1-800-572-8952

Email:

[contact@counteractbalancing.com](mailto:contact@counteractbalancing.com)

To locate a distributor in your area,  
 please visit our website

Made in



[www.counteractbalancing.com](http://www.counteractbalancing.com)

[www.counteractbalancing.com](http://www.counteractbalancing.com)

**THE BEST TIRE BALANCING  
 CHOICE FOR COMPETITION OR  
 RECREATIONAL ATVS & UTVS  
 NO MORE WHEEL WEIGHTS!**

# Injection Bottle Method Instructions



## D.I.Y. Kit K Includes:

4 x 4 oz bags  
4 Valve Cores  
4 Valve Caps  
Valve Core Remover  
Injection Bottle and Tube  
Part Number: **Kit K**



## D.I.Y. Kit M Includes:

4 x 8 oz bags  
4 Valve Cores  
4 Valve Caps  
Valve Core Remover  
Injection Bottle and Tube  
Part Number: **Kit M**



## D.I.Y. Kit L Includes:

4 x 6 oz bags  
4 Valve Cores  
4 Valve Caps  
Valve Core Remover  
Injection Bottle and Tube  
Part Number: **Kit L**



## D.I.Y. Kit N Includes:

4 x 10 oz bags  
4 Valve Cores  
4 Valve Caps  
Valve Core Remover  
Injection Bottle and Tube  
Part Number: **Kit N**

1. Cut the Counteract bottle spout above the mark, remove the bottle cap and carefully pour the beads into the injection bottle. Attach clear tube to the bottle cap spout.
2. Rotate the wheel so the valve stem is at the 4 to 6 o'clock position. Deflate the tire by removing the valve core with the tool provided and then place the end of the clear tube over the valve stem.
3. Invert the bottle and squeeze repeatedly to get the beads to flow down the tube into your tire.
4. Use an airline to clear the valve stem and screw the Counteract valve stem into the valve. Inflate the tire to manufacturers recommended pressure and screw the supplied valve cap on.



For installation assistance, call;  
1-800-572-8952  
or visit;  
[www.counteractbalancing.com](http://www.counteractbalancing.com)